


■ PLATES FOR ENCLOSURES

TBP

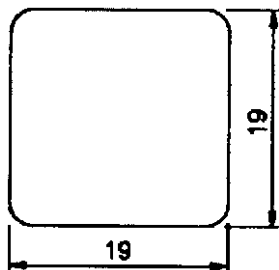

■ FOR PUSH BUTTON ILLUMINATED PUSH BUTTON, PILOT LAMP

TBP-01	TBP-02	TBP-03	TBP-04	TBP-05	TBP-06	TBP-07	TBP-08	TBP-09	TBP-10
○				IV	ON	OFF	START	STOP	UP
TBP-11	TBP-12	TBP-13	TBP-14	TBP-15	TBP-16	TBP-17	TBP-18	TBP-19	TBP-20
DOWN	SOURCE	HAND	AUTO	RUN	FWD	REV	CLOSE	OPEN	FAST
TBP-21	TBP-22	TBP-23	TBP-24	TBP-25	TBP-26	TBP-27	TBP-28	TBP-29	TBP-30
SLOW	RESET	EM.STOP	12V	24V	30V	110V	220V	B	1
TBP-31	TBP-32	TBP-33	TBP-34	TBP-35	TBP-36	TBP-37	TBP-38	TBP-39	TBP-40
2	3	4	5	6	7	8	9	INCH	➔
TBP-41	TBP-42	TBP-43							
B1	B2	CLEAN							

■ FOR SELECTOR SWITCH

TBP-51	TBP-52	TBP-53	TBP-54	TBP-55	TBP-56	TBP-57	TBP-58	TBP-59	TBP-60
○		○		ON OFF	ON ON	ON OFF ON	REV FWD	REV OFF FWD	AUTO HAND
TBP-61	TBP-62	TBP-63	TBP-64	TBP-65	TBP-66	TBP-67			
AUTO OFF HAND	START STOP	UP DOWN	UP OFF DOWN	1 2	1 2	1 2 3			